











Button	Function
POWER	ON / Stand-By
INPUT	Change Source Mode
P.MODE	Switch to Picture Mode
S.MODE	Switch to Sound Mode
MUTE	Sound ON / OFF - The screen will display a MUTE logo when the sound is OFF
DISPLAY	Display the channel name or any other information that is present on the specific signal source
ZOOM	Switch aspect ratio of the displayed picture
SLEEP	This will turn the television OFF in a requested amount of time
AUDIO/MTS	Switch to NICAM under the ATV mode
0-9	Manual channel selection
-/--	Short cut to up to 10 channels
	Back to the previous channel
VOL+	Increase the volume
VOL-	Decrease the volume
CH+	Move up a channel
CH-	Move down a channel
	Up / Down selector for the On-Screen Menu
	Left / Right selector for the On-Screen Menu
OK	Confirm selector for the On-Screen Menu
MENU	Enter or Exit the On-Screen Menu
FAV	Display your favorite channel list
EPG	Run the electronic program guide list within DTV
EXIT	Exit On-Screen Menu
TEXT	Open Teletext
HOLD	Within Teletext press this key to hold a page
TV/RADIO	Switch between DTV and DAB
SUBTITLE	Language selection
INDEX	Teletext Index Page
SIZE	Teletext enlarge or reduce the size of the display
REVEAL	Teletext reveal hidden text
SUBPAGE	Teletext enter sub-page
FREEZE	Freeze frame the current DVB screen
	USB Mode ~ Play or Pause
	USB Mode ~ Rewind
	USB Mode ~ Fast Forward
	DTV mode ~ record the current program to the USB flash disk
	USB Mode ~ Stop
	USB Mode ~ play the previous program
	USB Mode ~ play the next program
COLOURED BUTTONS	Teletext Selector

